


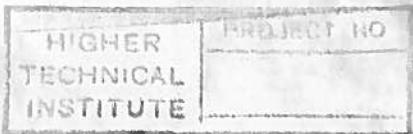

USER'S MANUAL



APPENDIX G

USER'S MANUAL

CONTENTS

<u>SECTION 1</u>	HOW TO RUN THE SIMULATOR.....	1
1.1	Load a file into memory.....	1
1.2	Edit a file from memory.....	1
1.3	Quit.....	2
1.4	Use the debug commands.....	2
<u>SECTION 2</u>	WORKING WITH THE DEBUG COMMANDS.....	3
2.1	(A)ssemble.....	3
2.2	(C)ompare.....	5
2.3	(D)ump.....	6
2.4	(E)nter.....	8
2.5	(F)ill.....	11
2.6	(G)o.....	12
2.7	(H)ex.....	14
2.8	(I)nput.....	15
2.9	(M)ove.....	16
2.10	(O)utput.....	18
2.11	(Q)uit.....	19
2.12	(R)eregister.....	20
2.13	(S)earch.....	24
2.14	(T)race.....	25
2.15	(U)nassemble.....	27
2.16	(W)rite.....	28
<u>SECTION 3</u>	HOW TO QUIT FROM SIMULATOR.....	29